

# **O.CT Intercooler-Kit**

**Audi S4 / A6 / Allroad 2,7T**



*Die ultimative Power*

**Installation instructions for the "O.CT RS Intercooler"**

**O.CT Tuning**

Oberscheider O.CT-Tuning, Reichsstr. 16a, A-6890 Lustenau

<http://www.oct-tuning.com>

E-Mail: [Kfz@oberscheider.com](mailto:Kfz@oberscheider.com)


## O.CT Intercooler

### Installation instructions for the "O.CT Intercooler"







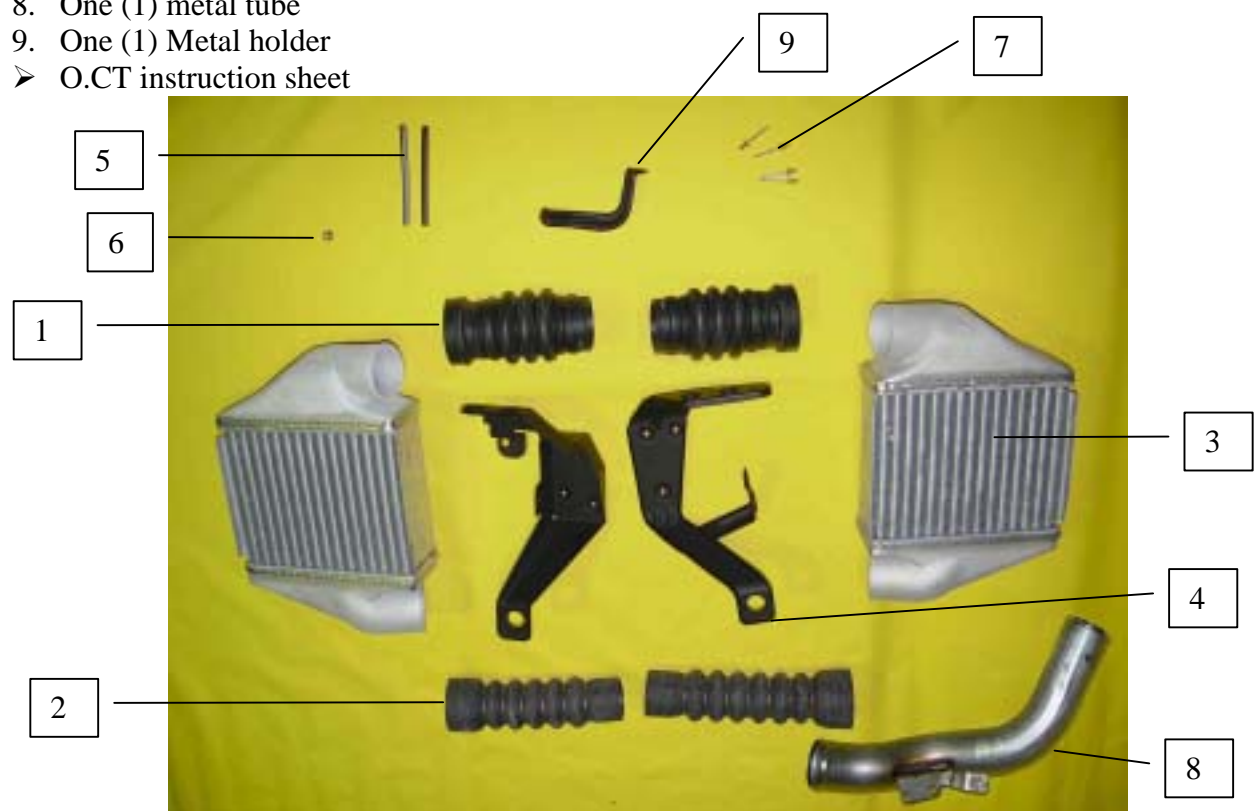


**Oberscheider O.CT-Tuning appreciate your purchase of the new O.CT IC for your Audi 2,7 T. You will be surprised how well it works.**

What's included with your package:

1. Two (2) upper Rubber hoses
  2. Two (2) lower Rubber hoses
  3. Two (2) Aluminum IC`s
  4. Two (2) Intercooler brackets
  5. Two (2) edge protections
  6. One (1) nut
  7. Four (4) rivets
  8. One (1) metal tube
  9. One (1) Metal holder
- O.CT instruction sheet



**Requested tools for the montage:**

- Socket set with metric sockets, extension, ratchet
  - 4mm Screwdriver
  - 5 mm Screwdriver
  - No. 1 Cross recess Screwdriver
  - Torx Screwdrivers
  - Angle grinder
  - Drill machine
- 
- 
- 
- 
- 
- 
- 
- 
- 

Montage:

Intercooler

- Step 1:** Dismount the sound deadener off the vehicle.
- Step 2:** Dismount the front bumper.
- Step 3:** Remove the headlights of the Vehicle.
- Step 4:** Remove the screws at the front box and dismount the bumper bracket left and right.
- Step 5:** Remove the upper screws of the front box left and right.
- Step 6:** Remove the bumper carriers left and right.
- Step 7:** Remove the left and the right horn. Remove the horn holders completely.
- Step 8:** Remove the upper and the lower hoses from the Intercooler left and right.
- Step 9:** Remove the original Intercooler left and right.
- Step 10:** Remove the rivets of the Intercooler holder by drilling and remove the holders. (Fig. 1)

Fig. 1



Fig. 2



- Step 11:** Sign the cuts with a marker and the delivered pattern left and right on the dirt guards. (Fig. 2)

**Step 12:** Cut the dirt guards as signed. Prime and lack the cutting edge carefully. Mount the edge guard. (Fig. 3)

Fig. 3



Fig. 4



**Step 13:** Fix the delivered brackets for the new Intercooler left and right with the rivets. Mount the both horns to the Intercooler brackets.

**Step 14:** Mount the new Intercooler left and right. Mount the 4 delivered hoses to the both Intercooler. (Fig. 4)

**Step 15:** Attach the front box to the bumper bracket carrier. Fix it with the upper screws. (Fig. 4)

**Step 16:** Attach the dirt guards sideways to the front box.

**Step 17:** Attach the sidly bumperholders left and right.

**Step 18:** Mount the both headlights and adjust it correctly.

**Step 19:** Mount the front bumper to the vehicle.

**Step 20:** Mount the sound deadener to the Vehicle.

**Enjoy!**

**Markus Oberscheider**

**Cut Pattern for the O.CT intercooler**

